

Rack Mounting Kit

Quick Installation Guide

The following instructions will help you install rack mount kit.


Step 1

Please fasten 8 screws (M4x6) as indicated to fix it on the rack mount base.



Step 2


Assemble two rack mount brackets by fastening 4 screws (M5x6) at each side.

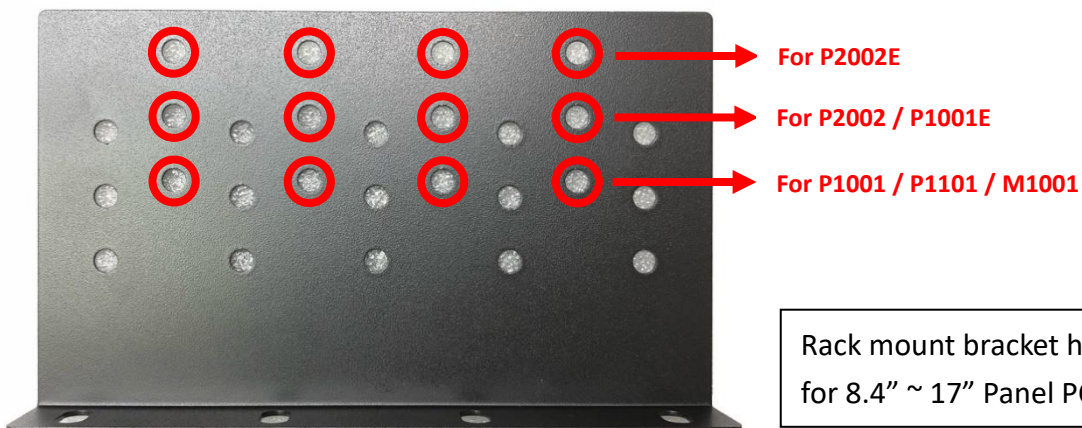


Left



Right

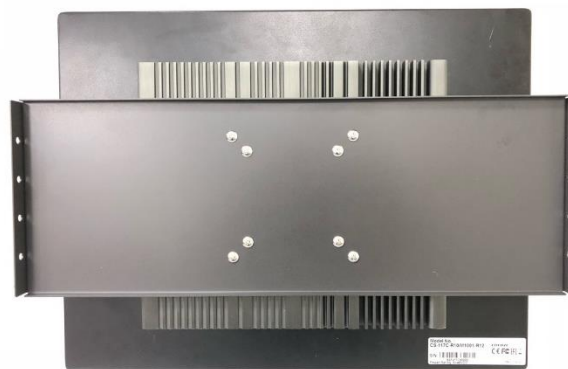

Bottom

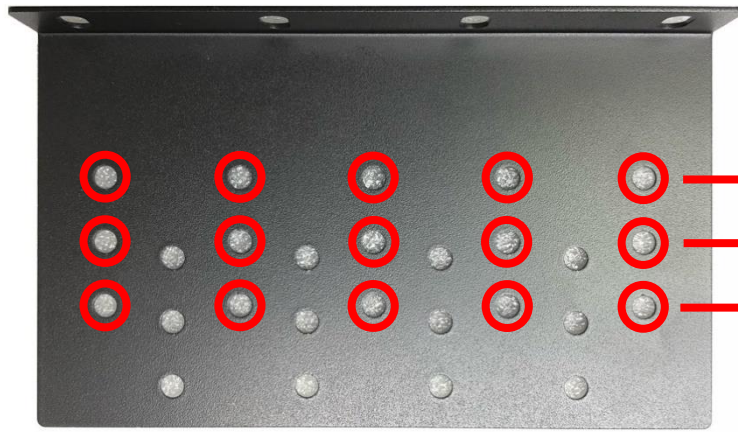

Rack mount bracket holes
for 19" ~ 21.5" Panel PC series

For P2002E

For P2002 / P1001E

For P1001 / P1101 / M1001



Left




Right



Bottom

Step 4

Assemble two rack mount brackets by fastening 4 screws (M5x12), flat washers and hex nuts at each side.

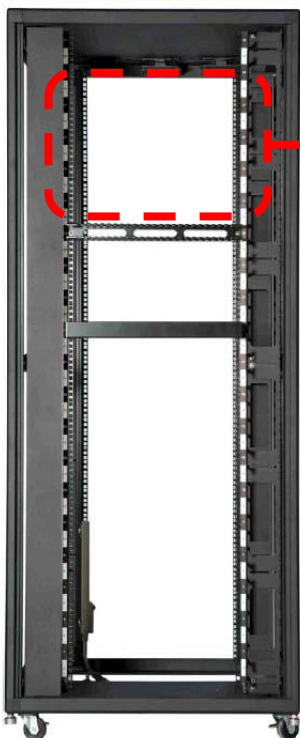

For 8.4" ~ 17"
Panel PC series



For 19" ~ 21.5"
Panel PC series

